

# Locker Assembly Instructions

## Single-Tier Lockers

### Safety Instructions

Use caution when handling and assembling metal parts. The metal has sharp corners and edges. Do not step on or into the lockers. Do not hang from the hooks, coat rod, door or frame. Do not store loose or heavy objects on top of the lockers.

### Tools needed:

3/8" Open End Wrench, Socket or Nut Driver, Drift Pin or Awl (to align holes) and gloves. Approximate assembly time: 20-25 minutes.

### General Instructions

It is recommended that these lockers be assembled by more than one person, using a raised work surface. You may perform the work on a carton to protect the lockers (remove all staples first). To assure squareness of the units, do not fully tighten the nuts and bolts until the units are completely assembled and placed in their final position. Square and level the units and then tighten the hardware. An uneven floor surface can affect locker performance. Use proper lifting techniques when raising lockers.

### Assembly Instructions

1. Lay down the Back Panel (A), with the flanges facing up. Set one Side Panel (B) inside of the flange of the Back Panel (A). Lay the Leg (I), with the wider flange against the back panel and align the holes. Attach the Back Panel (A), Side Panel (B) and the Leg (I) all together using two #10-24 x 3/8" bolts and nuts. Note: The edge of the Side Panel should be between the Back Panel and the Leg.

2. Bolt the Top (C) and the Bottom (C) to the Side Panel. Note that the lockers' Top and Bottom are identical. Make certain that their fronts are in the correct position (see illustration).



3. Bolt the Shelf (E) into place on the Side Panel (B). Note: the front of the Shelf angles down and then up.

4. Set the second Side Panel (B) inside of the flange of the Back Panel (A). Lay the second Leg (I), with the wider flange against the back panel. Align the holes and attach the Back Panel (A), Side Panel (B) and the second Leg (I) all together using two #10-24 x 3/8" bolts and nuts.

5. Remember to bolt the Shelf (E) to the second side panel. If applicable, secure the Coat Hooks (H) and Rod (G) with the #10-24 x 3/8" bolts and nuts.

6. Place the Door Frame (D) over the assembled locker and fasten. Make certain that the Sides (B) are inside the Door Frame.

7. Carefully raise the locker to the upright position. Square and level the unit, then tighten all nuts and bolts.

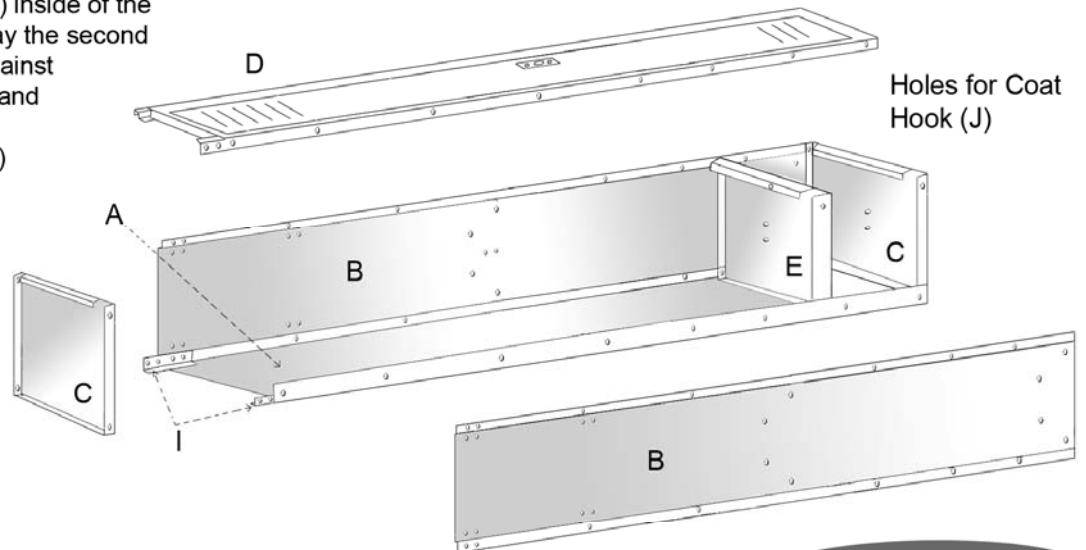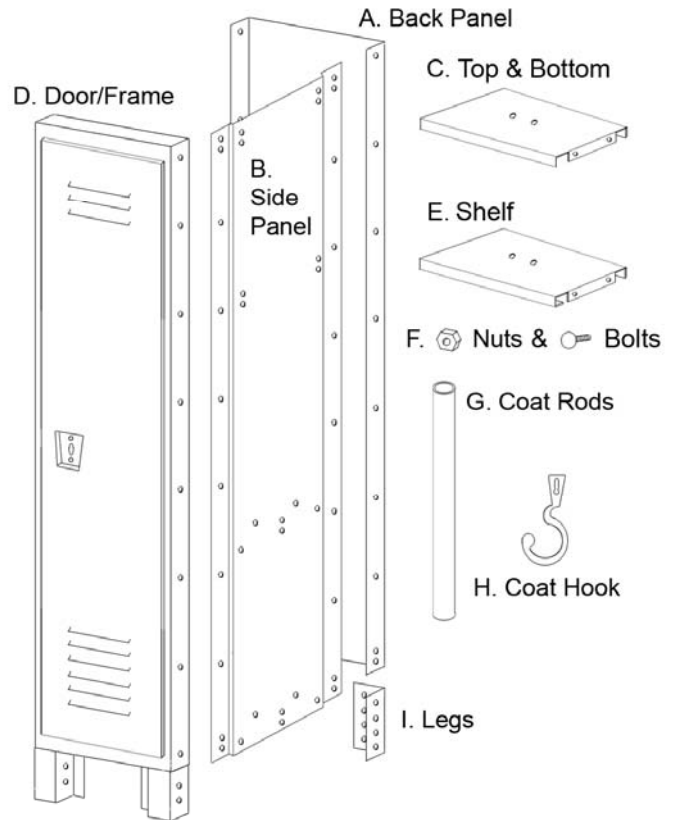

**Action Wholesale Products**

1200 Edinger Avenue  
Tustin, California 92780  
1-800-966-3999  
(714)247-0100

(continued...)

If you are building a two or three-locker-wide unit, please refer to the "joining pattern" in the diagram below. Note: the Back Panels (A), Side Panels (B), Top & Bottom (C) and any shelves or mid-panels (E) will need to be completely bolted together before adding the two or three-locker-wide Door Frame (D).

## Triple Unit Joining Pattern

