

Open Shop Desk Assembly Instructions

Shop Desk with Riser

Parts List

Qty.	Description
1	Desktop Assembly
4	Legs
2	Side Bars
1	Foot Rest
1	Drawer
1	Drawer Stop
22	Screws 1/4 x 20 x 1/2
22	Nuts 1/4 x 20
1	Built-In Lock for Drawer
2	Keys for Built-In Lock

Tools Needed

Flat Head Screwdriver
7/16" Wrench or Nut Driver

Step 1

If drawer is inside desktop, remove drawer. Insert legs inside the bottom of the desktop assembly, then align leg holes with holes in corner of the desktop assembly so legs are at equal height. Insert screws and bolt legs to desktop assembly (four bolts per leg).

Step 2

Bolt side bar to legs on left and right side.

Step 3

Bolt foot rest to side bars.

Step 4

Insert drawer into desktop assembly.

Step 5

Open draw and place screws through two holes in bottom of drawer. Insert drawer stop (from below the desktop assembly) through the screws and tighten nuts.


Step 6

Align holes on riser with holes on side and back of the desktop assembly. Insert screws through holes and bolt to desktop assembly.


Step 7

Insert lock into drawer hole so flat sides of lock and flat sections of drawer hole are aligned. Insert clip between the drawer (interior) and threads on lock.

Exploded Side View of Shop Desk

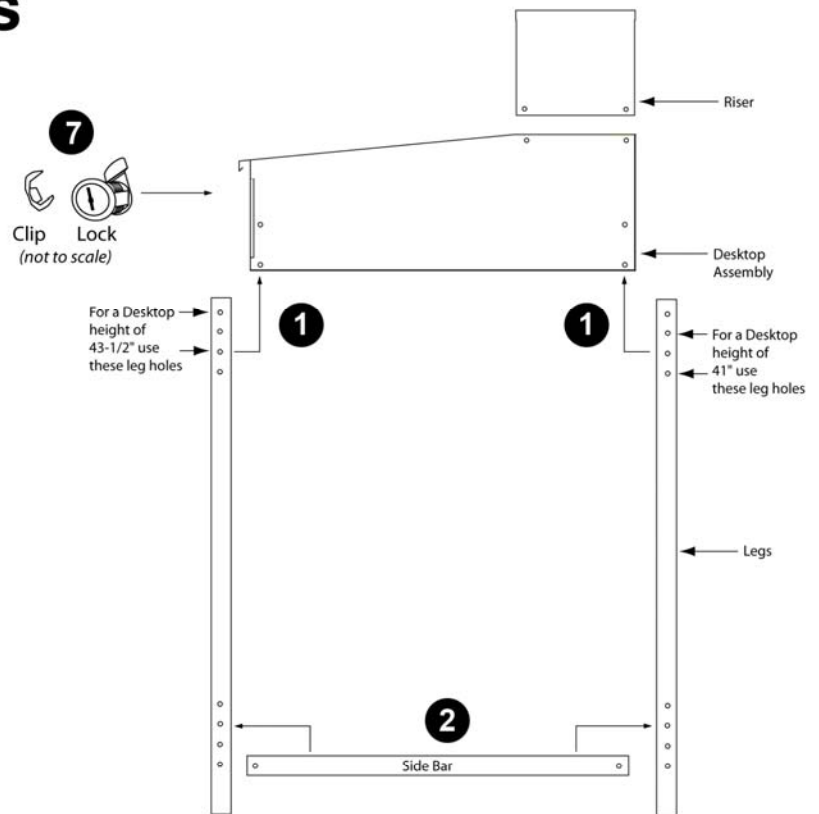

Front View of Shop Desk

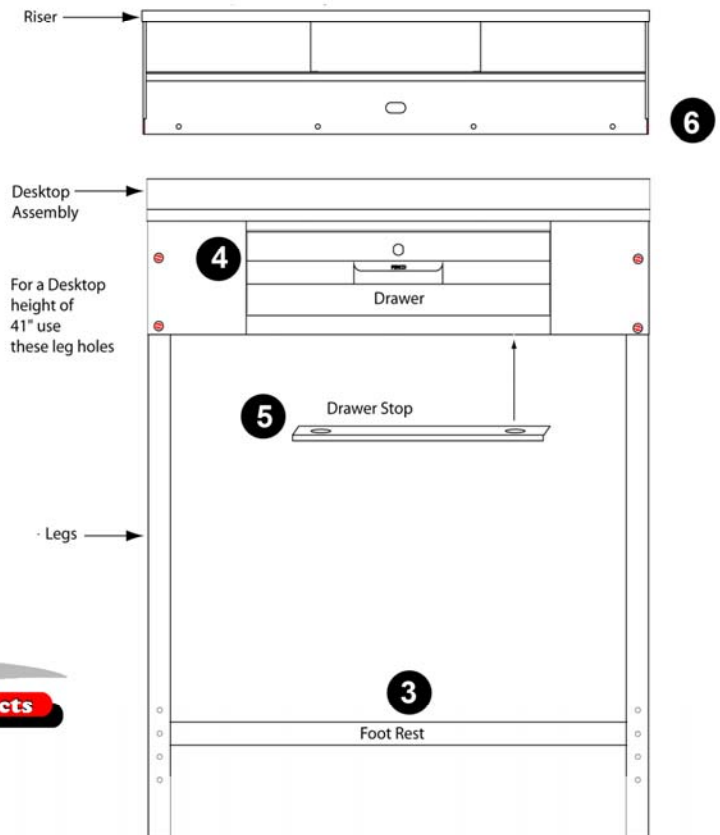

Action Wholesale Products

1200 Edinger Avenue
Tustin, California 92780
1-800-966-3999
(714)247-0100