



Assembly Instructions

Archive Shelving - Styles A & B

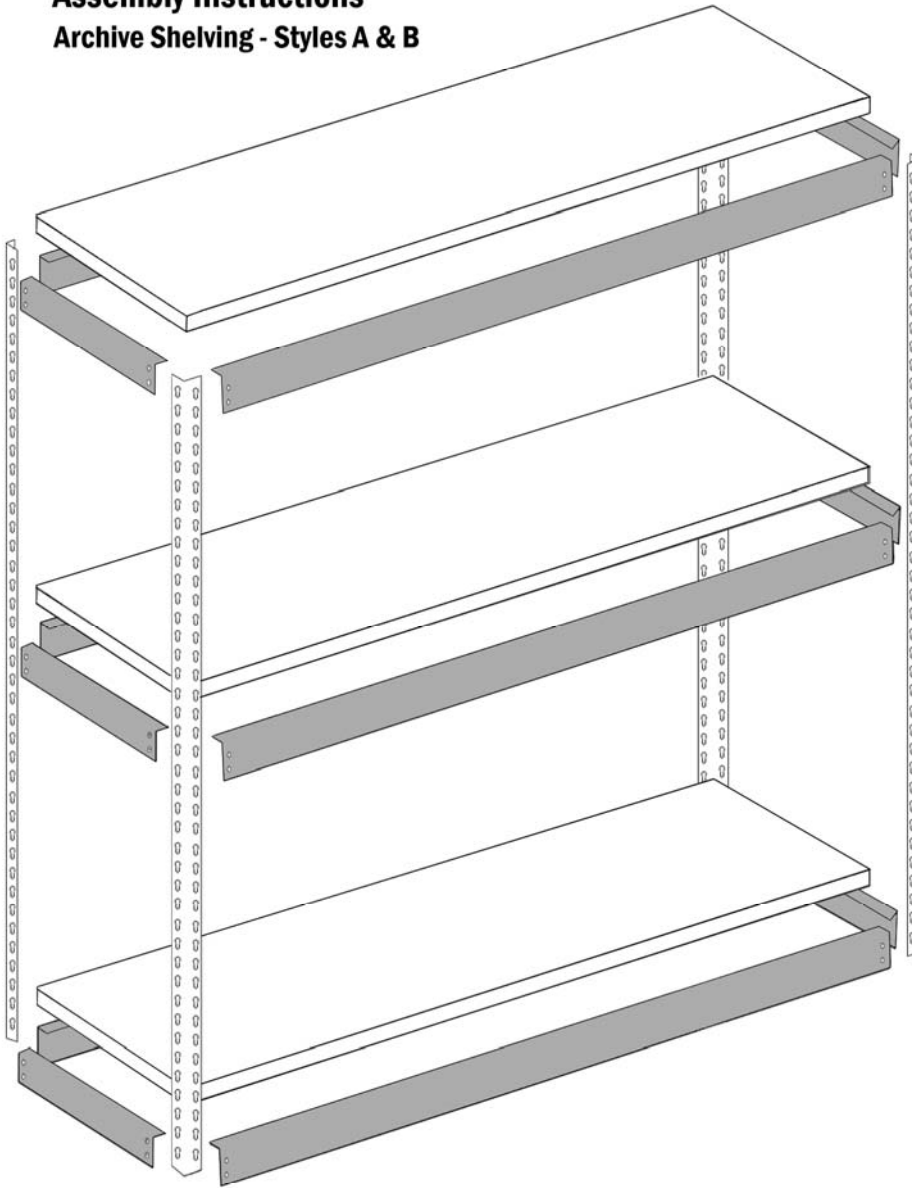

NOTE: Keyholes are tapered to ensure rivets fit properly when beams are struck firmly with a hammer or mallet.

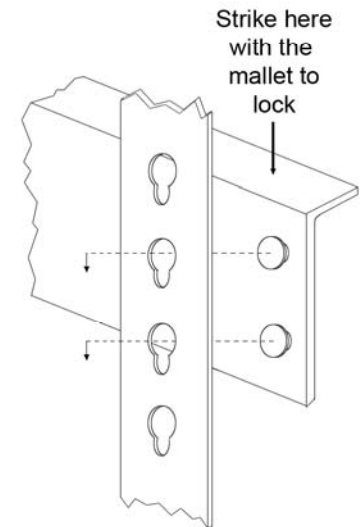

1. Using a hammer or mallet, tap double rivet beams into upright posts to form the base or bottom shelf of the unit. You will use 4 double rivet beams for each shelf (2 short, 2 long).
2. Tap double rivet beams into top of upright posts to create top shelf. Again, you will use 4 double rivet beams for each shelf.
3. Determine desired shelf spacing for other shelves in unit and install double rivet beams.
4. Place wood shelves into position on top of each 4-set of double rivet beams to complete shelves.

Action Wholesale Products

1200 Edinger Avenue
Tustin, California 92780
1-800-966-3999
(714)247-0100