



Assembly Instructions Bin Units

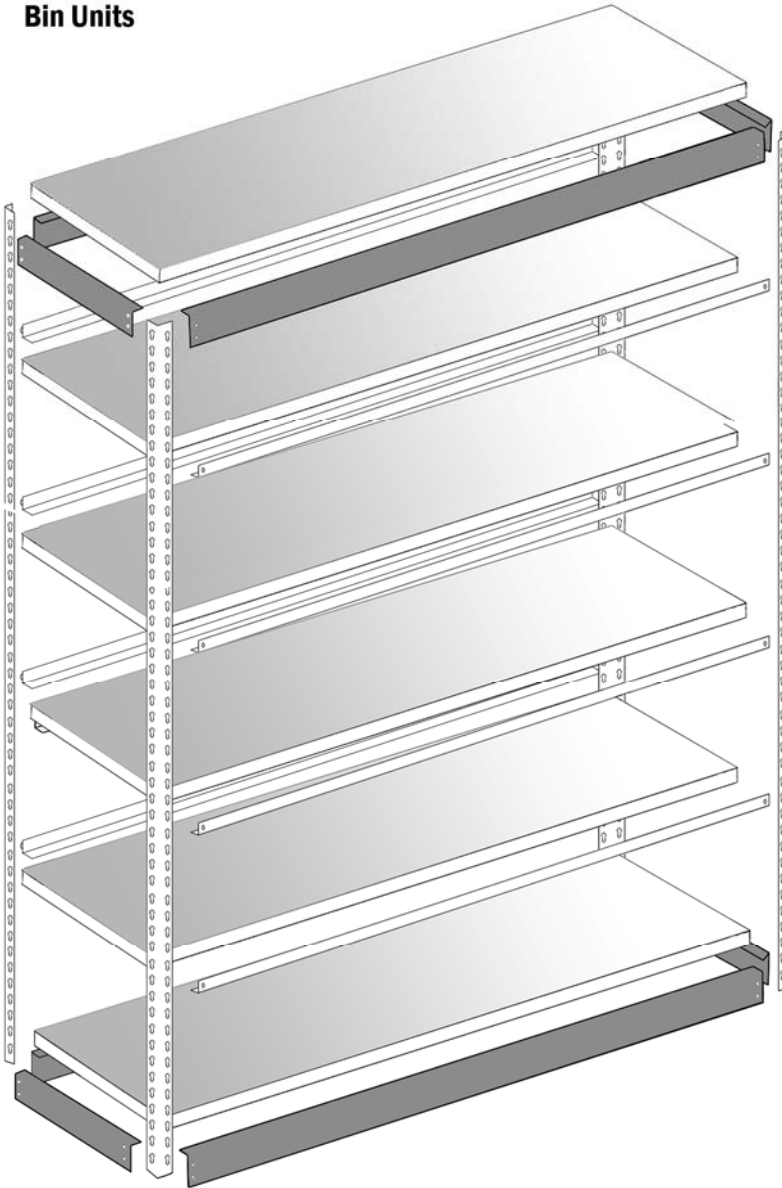

NOTE: Keyholes are tapered to ensure rivets fit properly when beams are struck firmly with a hammer or mallet.

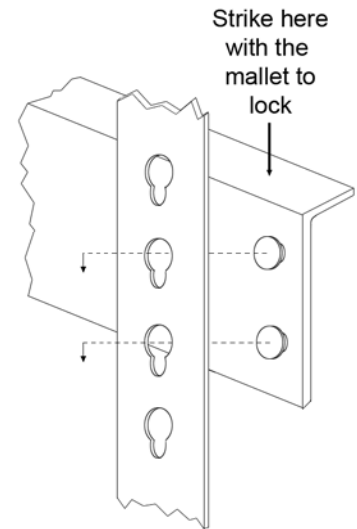

1. Using a hammer or mallet, tap double rivet beams into the lowest keyholes on each upright post to form the base (bottom shelf).
2. Tap double rivet beams into top of upright posts to create top shelf.
3. Determine desired shelf spacing and install front and back single rivet beams.
4. Place wood shelves into position between the front and back single rivet beams.
5. Add bins to shelves.

Action Wholesale Products

1200 Edinger Avenue
Tustin, California 92780
1-800-966-3999
(714)247-0100