



## Assembly Instructions

### Archive Shelving - Style C

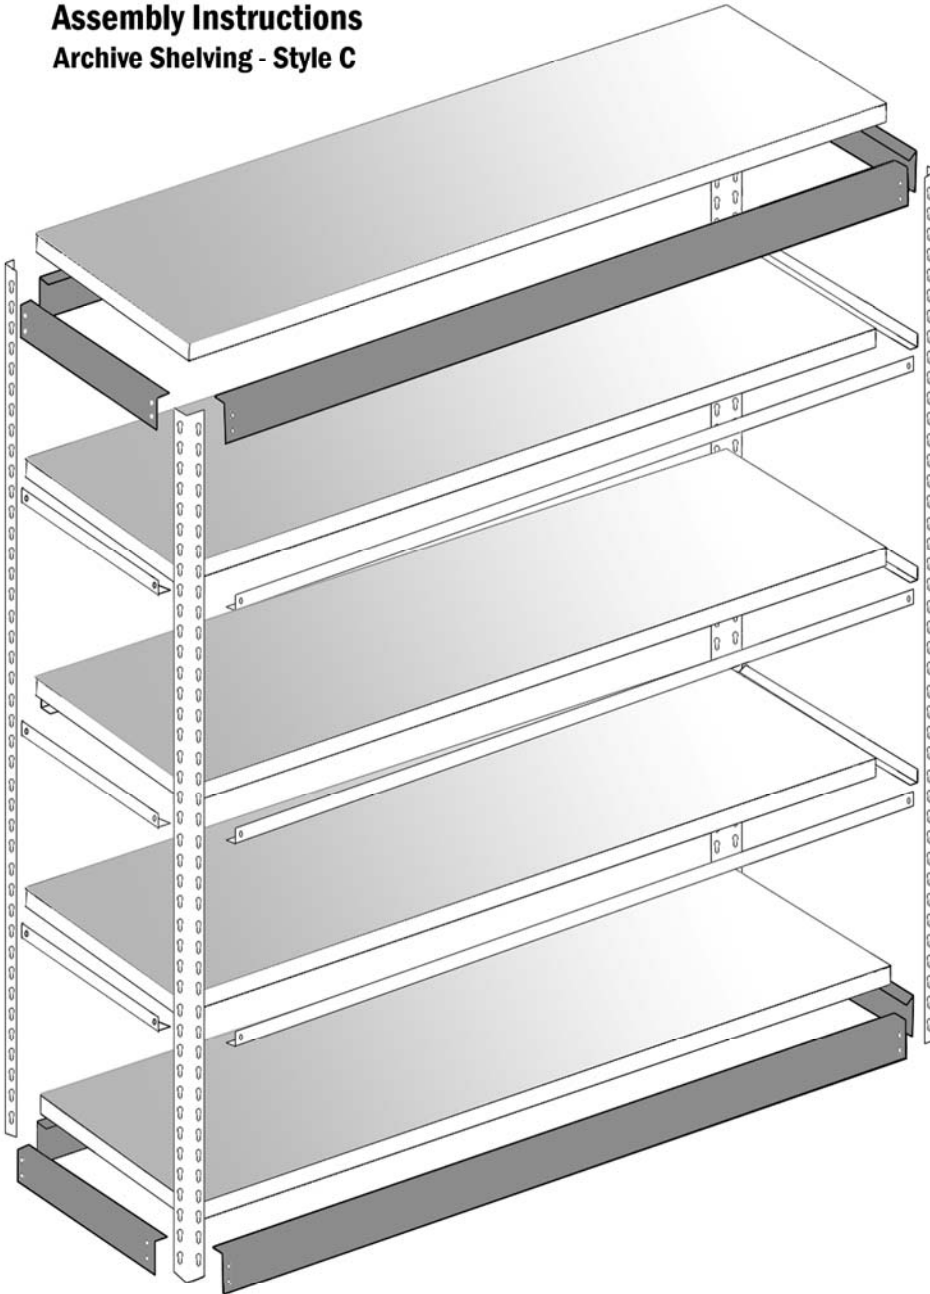

NOTE: Keyholes are tapered to ensure rivets fit properly when beams are struck firmly with a hammer or mallet.

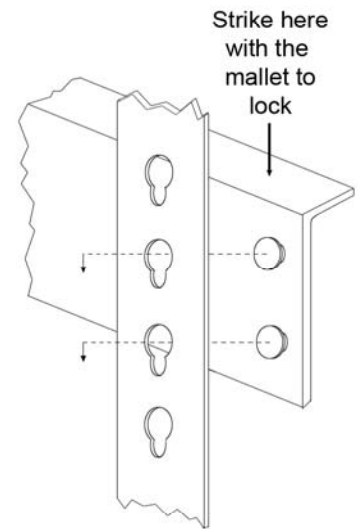

1. Using a hammer or mallet, tap double rivet beams into upright posts to form the base or bottom shelf of the unit. You will use 4 double rivet beams for this shelf (2 short, 2 long).
2. Tap double rivet beams into top of upright posts to create top shelf. Again, you will use 4 double rivet beams for this shelf.
3. Determine desired shelf spacing for other shelves in unit and install single rivet beams into place to make each shelf. You will use 2 single rivet beams per shelf.
4. Place wood shelves into position on top of each 4-set of double rivet beams to complete shelves.

**Action Wholesale Products**

1200 Edinger Avenue  
Tustin, California 92780  
1-800-966-3999  
(714)247-0100